


# Gas Fireplace

## Instructions


NOTE: This is a “Majestic” Fireplace, but type is unknown

# Parts of the Puzzle

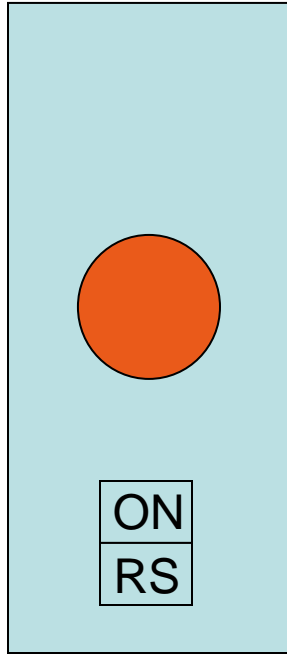

Flame Igniter


Rocker Switch

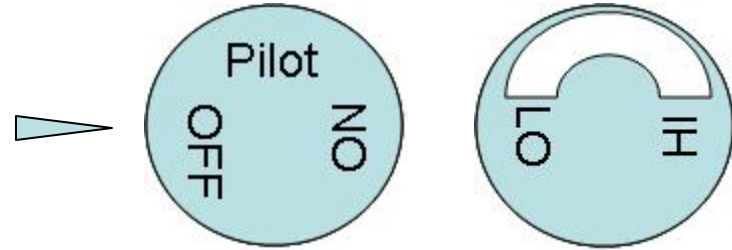

Pilot Control

Flame Control

The Flame Igniter and Rocker Switch are located under the fireplace at the far left. The Pilot Control and Flame Control knobs are easily located as part of the gas control mechanism. The Remote Receiver lies loose at the left side with wires connected to the back of the Rocker Switch.

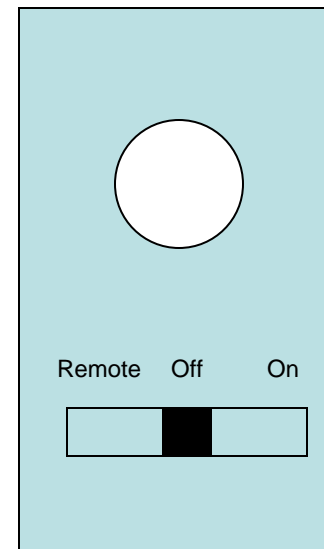

Remote Receiver


# Rocker Switch

The Rocker Switch has three positions.


The “ON” position (press the top part of the switch) turns the fire on.

The “RS” position (press the bottom part of the switch) permits the remote control switch to turn the fire on and off.


The neutral position (halfway between “ON” and “RS”) turns the fire off.

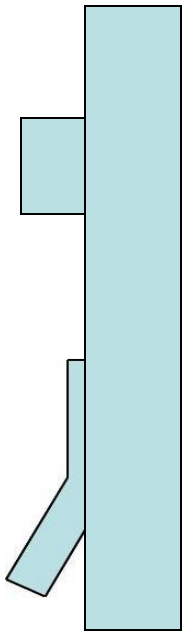

Side view of rocker switch in “ON” position

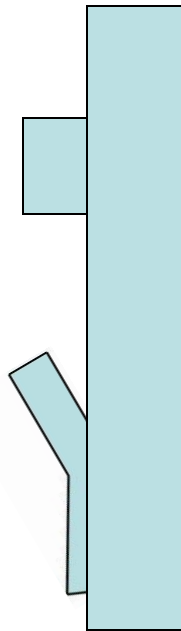

Side view of rocker switch in “RS” position

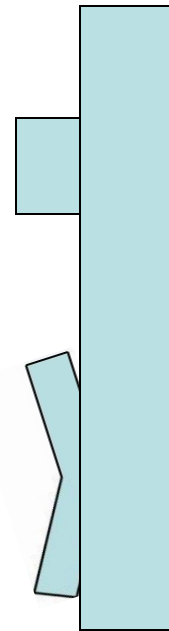

Side view of rocker switch in “Neutral” position


# Remote Receiver

The Remote Receiver has three positions. NOTE: the Rocker Switch must be in the “RS” Position for the Remote to work.


The “On” position (Move switch button all the way to the right) turns the fire on.

The “Off” position (move switch button to the middle) turns the fire off.


The “Remote” position (move switch button all the way to the left) permits the fire to be operated using the remote control.

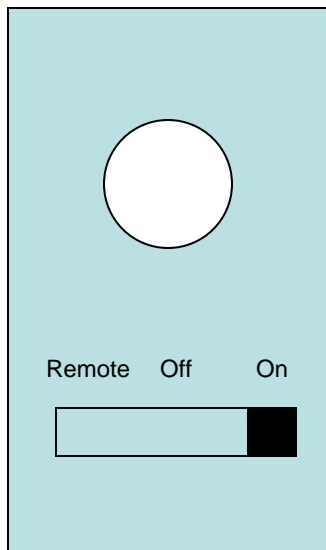

“ON” position

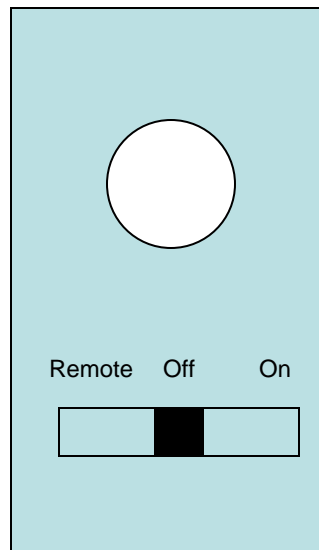

“Off” position

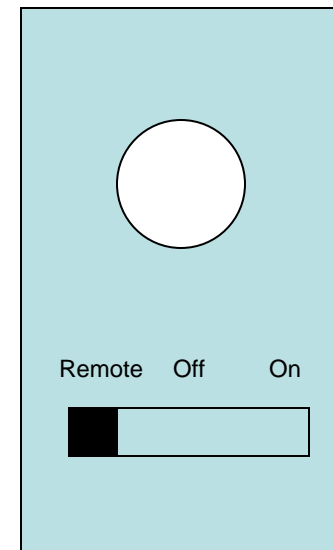

“Remote” position

# To Light the Pilot

